

Site Name: Units 2-4, Commonwealth Buildings, Woolwich

Site ID:	SA30	Site Address:	Woolwich	Area (ha):	0.17
Current Use:	Vacant, was bus garage, but lawful use is B8 storage	Proposed Use:	Potential Primary School	Vulnerability Classification:	More Vulnerable

Tidal Source:

Flood Zone 1 (<0.1% AEP):	Flood Zone 2 (0.1% AEP): 100%	Flood Zone 3 (1% AEP): 100%	Flood Zone 3b (5%AEP): 0%	Area Benefiting from Defences:	100%
-------------------------------------	--------------------------------------	------------------------------------	----------------------------------	---------------------------------------	------

Flood Zones and Flood Defences


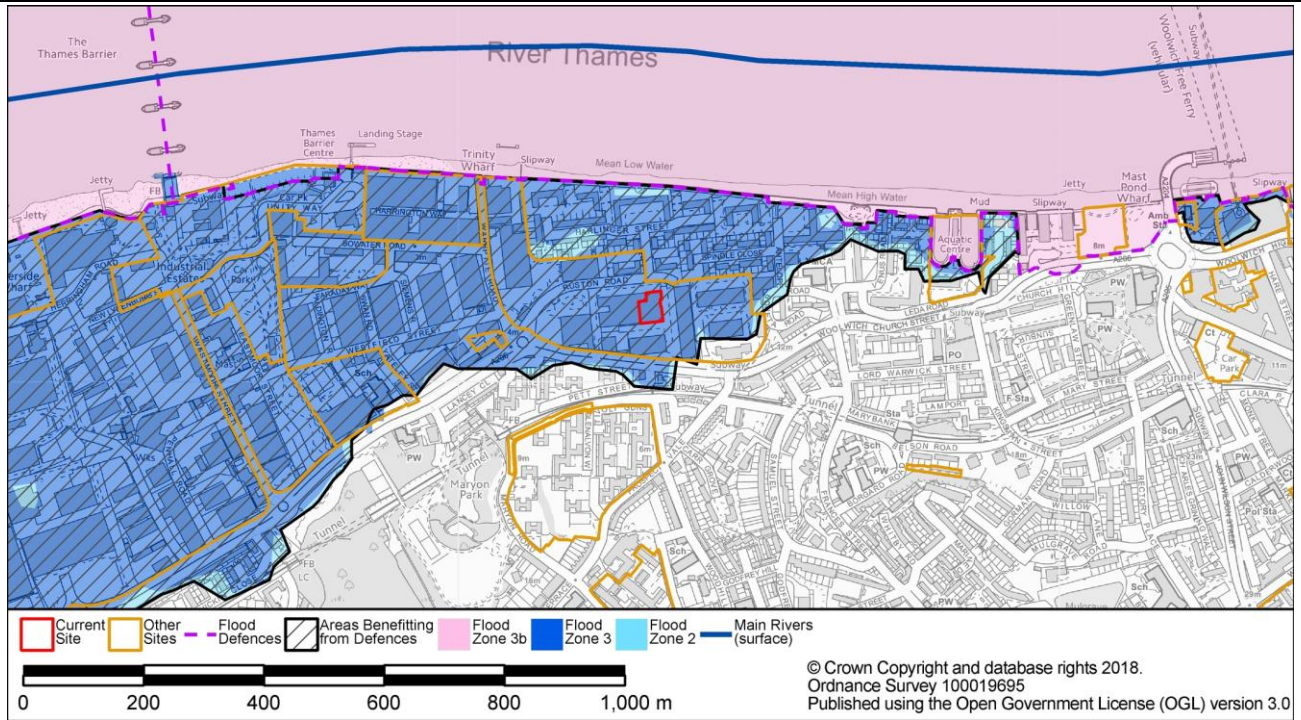


Figure A - Flood Zones

Flood Defence Source:	tidal	Upstream of Thames Barrier?	No
Flood Defence Type:	wall	Standard of Protection:	1000
Flood Warning Area	Tidal Thames from Woolwich Arsenal to Deptford Creek (100% Overlap)	Emergency Rest Centre	Clockhouse Community & Recreation Centre

Residual Tidal Flood Risk

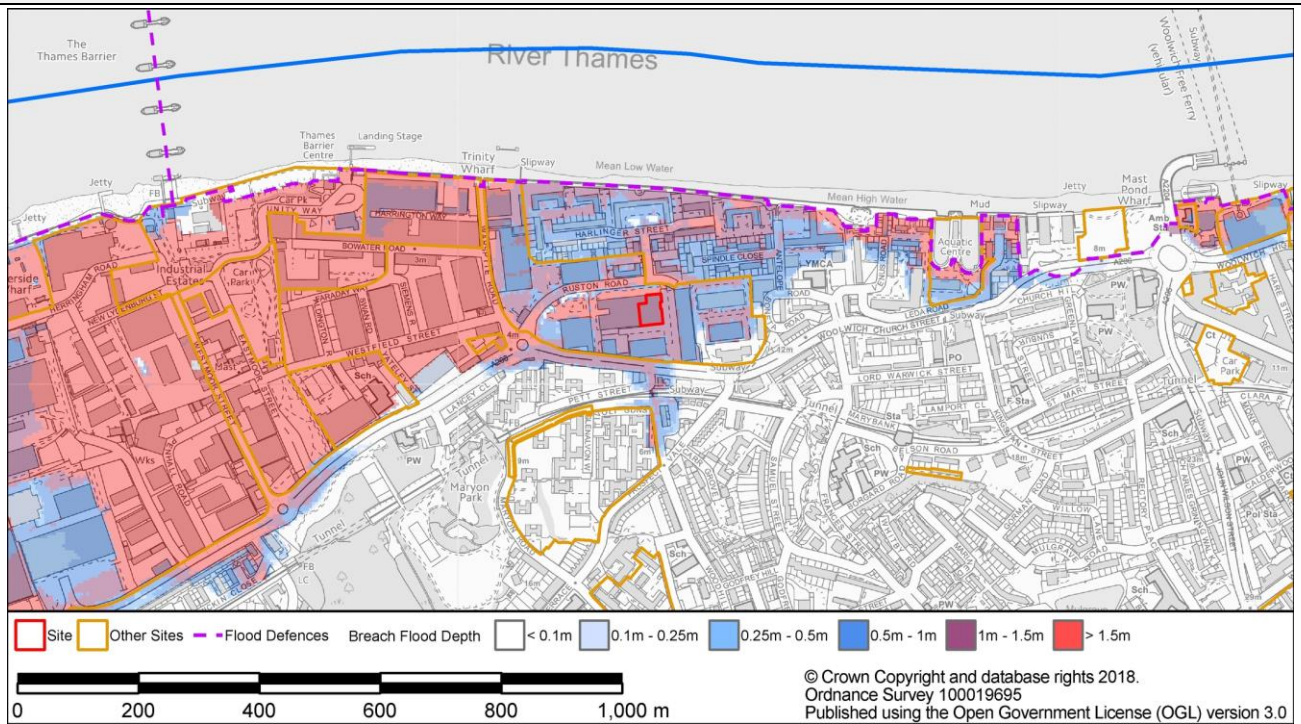

Site Name: Units 2-4, Commonwealth Buildings, Woolwich

Figure B - Maximum Flood Depth (Downriver Breach Assessment, 0.5% AEP 2115)

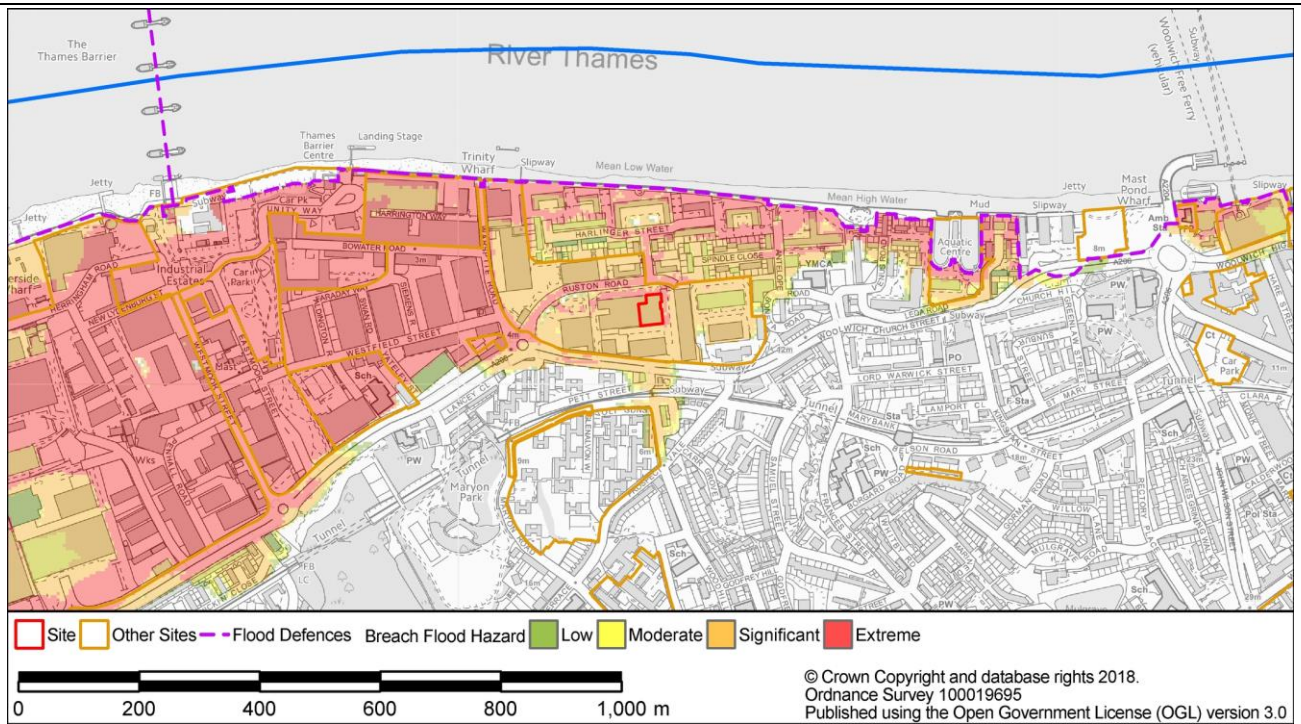


Figure C - Maximum Flood Hazard (Downriver Breach Assessment, 0.5% AEP 2115)

Surface Water Source

Risk of Flooding from Surface Water (RoFSW) High

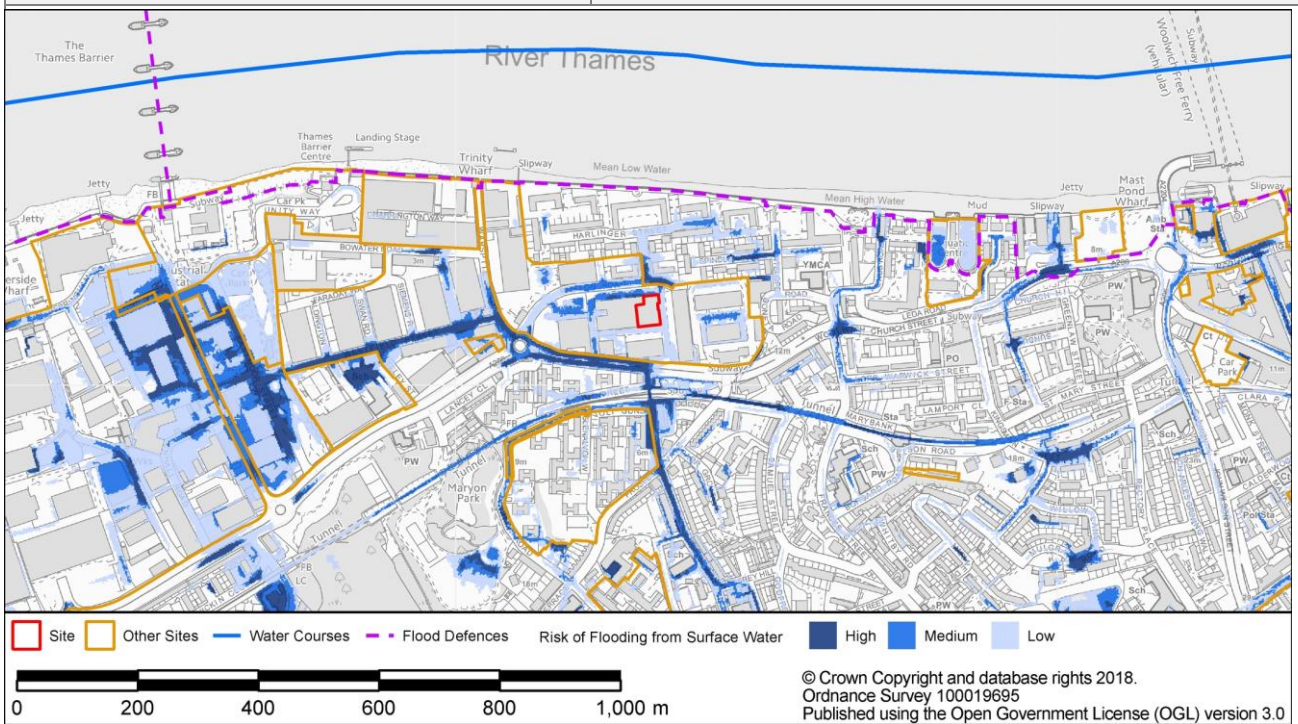


Figure D Risk of Flooding from Surface Water (RoFSW)

Critical Drainage Area Group6_014 (100% Overlap)

Groundwater Source

Bedrock Geology	Upper Chalk Formation	Superficial Geology	Head - Clay, Silt, Sand, Gravel
Bedrock Aquifer Designation	Principal (100% Overlap)	Superficial Aquifer Designation	Secondary (undifferentiated) (100% Overlap)

Potential Groundwater Flooding Zone Zone A

Other Sources

Sewer Flooding (within 4 digit postcode) Internal Flood Incidents: NoData External Flood Incidents: NoData

Artificial sources

Site Name: Units 2-4, Commonwealth Buildings, Woolwich

Site Specific Recommendations

The site is located within Flood Zone 3 but is in an area that benefits from the flood wall defences. The site is at residual risk of tidal flooding. More Vulnerable uses must be located on the first floor or above, with Less Vulnerable uses at ground level. Basements are not permitted on the site. The ROFSW map shows that site and surrounding area may be at high risk of surface water flooding. An assessment of the local surface water flow paths should be made during the development of the site design. Buildings and other more vulnerable aspects of the development should be placed away from those areas at risk of surface water ponding. Reference should be made to the Integrated Water Management Strategy for the area.

Finished floor levels should be set at whichever level is higher: 300mm above the general ground level of the site or 600mm above the estimated sea level for a 1 in 200 year (0.5%AEP) event (including climate change). A number of flood resistance and resilience measures can be implemented into new developments to mitigate potential flooding. Guidance on resilience measures can be found in the document 'Improving the Flood Performance of New Buildings, Flood Resilient Construction' published by The Department for Communities and Local Government (CLG).

Potential overland flow paths from surface water should be determined and appropriate solutions proposed to minimise the impact of the development, whilst ensuring that flows are not diverted towards other properties elsewhere. Developers should consider using design for exceedance approaches by using urban areas and infrastructure to help manage local flooding. Flow paths should be assessed to inform the strategic location of SuDS and techniques to route flows around the edge of buildings. Careful consideration should be given to the use of fences and landscaping walls so as to prevent causing obstruction to flow routes.

Unobstructed safe access routes to and from the development should be provided. These should provide access to higher ground that is not at risk from tidal flooding. In the event of a breach in defences there is potential that dry routes to a safe location may be limited. The local area is covered by the 'Tidal Thames from Woolwich Arsenal to Deptford Creek' Environment Agency Flood Warning Area. A Flood Warning and Evacuation Plan (FWEP) must be prepared for the site, detailing how flood warning will be provided as well as how the safety of occupants and access to/from the development will be ensured. Further details of what should be included can be found in the Developer Guidance.

Reference to the SWMP Appendix D Figure D6 identifies that (prior to the completion of a site investigation to determine precise local conditions) infiltration of surface water into the ground is uncertain for the site. Site investigations will be required prior to the development of a Drainage Strategy for the site. Development should utilise sustainable urban drainage systems (SUDS) unless there are practical reasons for not doing so. The site is located within the Group6_014 Critical Drainage Area. The potential development must not increase flood risk to other areas within the CDA. Where an increased risk exists, developers need to provide a Drainage Strategy to demonstrate how they intend to address this, by what methods, over what timeframe and how maintenance of such works would be funded over its lifetime. This should include a consideration of SuDS in line with the London Plan 5.13 and Local Plan Policies. Surface water run-off should be managed in line with Royal Greenwich's surface water management requirements, as set out in Chapter 4 of the Developer Guidance.

Summary

The site is within Flood Zone 3, defended by a flood wall, and has a residual risk of tidal flooding. More Vulnerable uses must be located on the first floor or above, with Less Vulnerable uses at ground level. Tidal flood risk mitigation measures should be implemented into the site design to manage flood risk. It is recommended that effective surface water management measures are implemented, including careful site and building layout and the incorporation of SuDS, in order to reduce flooding both on the site and routing of flood water to other areas. Due to the extent of flood risk on the site, a flood warning and evacuation plan should be implemented to ensure access to and from the site. On this basis, it is likely that this site could pass the Exception Test.